

COX CRANKSHAFT REMOVAL/REPLACEMENT TOOL BY MECOA



Remove piston/cylinder. Place crankcase on a flat surface. Screw extraction pusher into the crankshaft completely.



Gently tap with rubber mallet or small hammer. Crankshaft will press out of the prop driver.



To reinstall prop driver remove knurled knob and place square and 2 washers on stud. A little oil on the washers helps. Use a plastic pen to lock the crankshaft and tighten the nut pressing the prop drive onto the crankshaft.

MECOA - Model Engine Corp of America
PO Box 5 - Sierra Madre CA 91025
www.mecoa.com

